

MINI MACHINE PISTOL

SPECIFICATIONS:

CLASSIFICATION IMPROVISED
CALIBRE22 L.R. OR .22 SHORT, ADAPTABLE
OPERATION FULL AUTOMATIC ONLY
CAPACITY 8, 15 SHOTS. MODIFIED AR-7
EXPLORER MAGAZINES ARE USED.
(OTHER MAGAZINES ADAPTABLE)
OVERALL LENGTH... DEPENDS ON BARREL LENGTH

REMARKS: USUALLY ENCOUNTERED IN DIFFERENT STYLES AND CALIBRES.

SYSTEM OF OPERATION:

The weapon operates on a simple blow back principle. The bolt is drawn to the rear by its grasping lug, fastened to the rear end of the bolt. The bolt will be held in open position by the sear. The sear engages the bolt face and holds it this way until the trigger is pressed. When the trigger is pressed, the bolt moves forward, picks up a round, loads it into the chamber, and fires it. The system ensures that the cartridge has been fully housed into the chamber before the hammer hits the firing pin. The underside portion of the hammer will press against the rear of the receiver tube where the bolt is contained during the last 1/16 inch of the bolt closing. This contact of the hammer and receiver is transmitted to the firing pin, igniting the cartridge. The weapon will continue full automatic fire until the trigger is released or the magazine empty.

CONSTRUCTION DETAIL:

The receiver is a simple square tube 1 1/8 x 1 1/8 inch or larger, depending on the size of the weapon or calibre. Slots to accommodate the magazine, ejection slots, and a slot for the recoil control screw head are cut. The recoil control screw prevents further backward pressure of

the slide during operation, because the recoil spring may not have sufficient strength to stop overtravel of the bolt. This screw will also prevent the bolt from flying out of the receiver if the recoil spring guide nut accidentally disconnects from the bolt. The recoil spring is a cut down M1 carbine recoil spring. (Any similar spring used in .22 autos will do). It is housed in a hole just above the muzzle hole and is integrally drilled to the barrel stock.

The trigger housing and magazine housing are both formed from 1/16 inch steel sheet and brazed or riveted together in place to form a simple frame.


The magazine used is from the AR-7 Explorer .22. It is best suited because of its built in feed ramp. This means that the barrel can be built easier without the provision for feed ramp. If the 15 shot magazine is to be used, file a notch aligned to the magazine catch with the magazine fully inserted. File the magazine hump on the right side of the magazine body so it can be inserted freely into the magazine housing.

The ejector can be riveted or brazed to the left side of the receiver only. This will permit a cut out or clearance to be cut on the right side of the magazine housing before riveting or brazing it to the trigger housing. This clearance cut will accommodate the sear. The sear is held in place by a screw which is connected to the right side of the trigger housing frame only.

The safety lever is retained by a plate on the right side of the trigger housing and in turn secured by the barrel pivot screw nut. The lever contains the index ball and spring for type of fire setting.

Two lugs are brazed to the front and rear underside of the receiver tube to connect the receiver to the trigger housing. Both lugs (if possible) must be as thick as the width of the magazine housing. This eliminates the use of washers to conform with the space inside the housing. A spacer can be used on the trigger since the most practical trigger thickness is 1/4 to 3/8 inch.

PARTS LIST

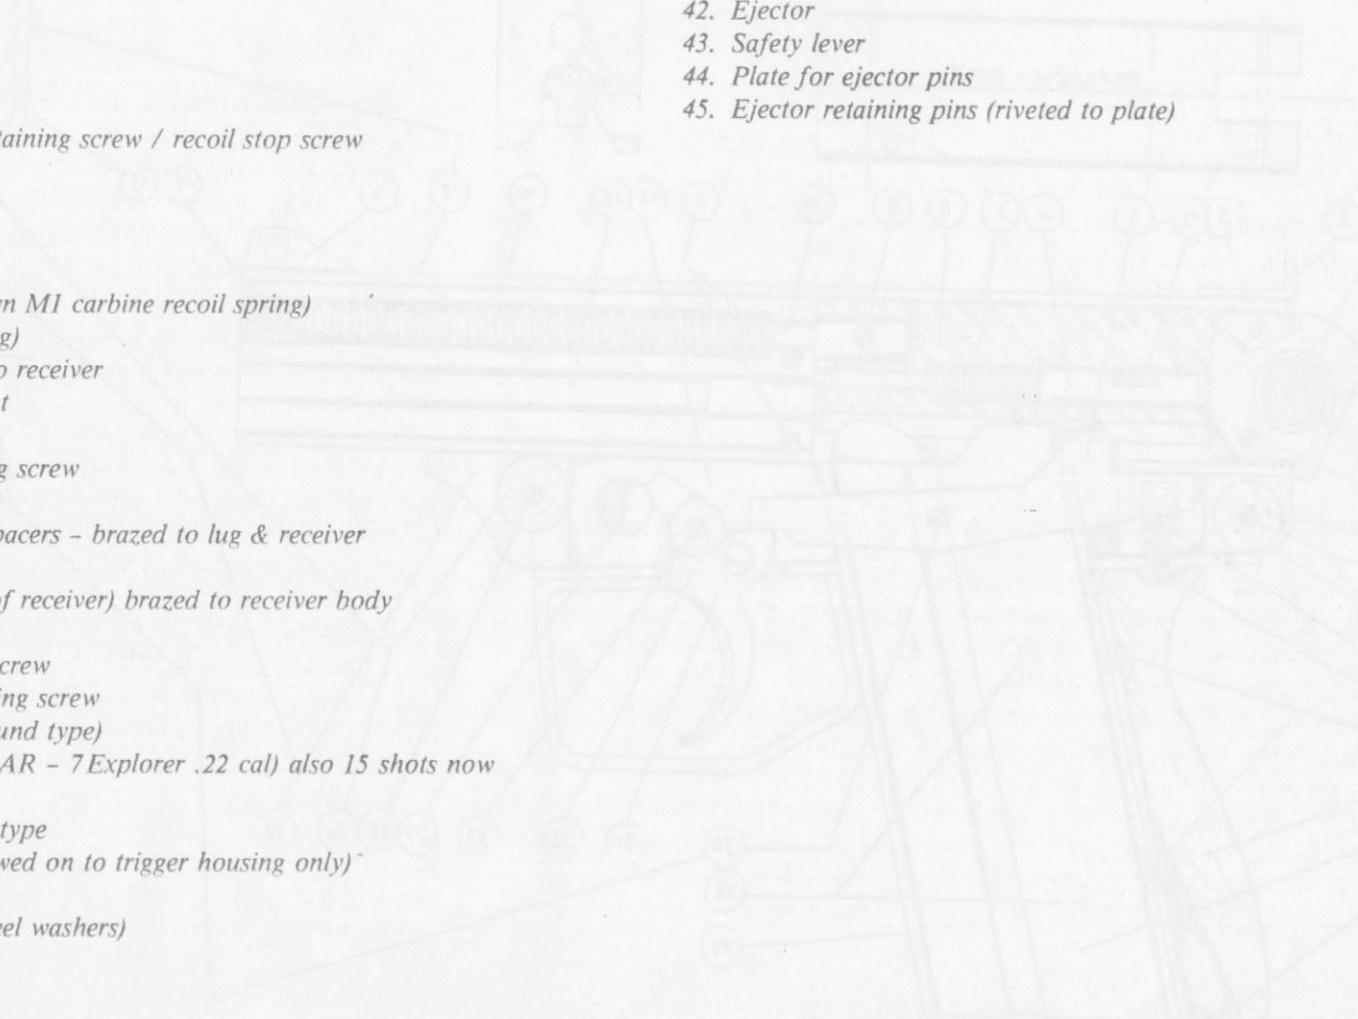- 
1. Hammer
 2. Rear sight (brazed on top of receiver)
 3. Hammer stop pin
 4. Firing pin retaining pin
 5. Sear bar
 6. Firing pin
 7. Firing pin spring
 8. Bolt
 9. Recoil spring guide retaining screw / recoil stop screw
 10. Recoil spring guide
 11. Barrel retaining pins
 12. Trigger housing
 13. Barrel
 14. Recoil spring (cut down M1 carbine recoil spring)
 15. Receiver (square tubing)
 16. Front sight - brazed to receiver
 17. Recoil spring guide nut
 18. Grasping bolts
 19. Grasping bolt retaining screw
 20. Hammer pin
 21. Rear connecting lug spacers - brazed to lug & receiver
 22. Connecting lug screw
 23. Connecting lug (rear of receiver) brazed to receiver body
 24. Sear spring
 25. Sear spring retaining screw
 26. Magazine catch retaining screw
 27. Grip stocks (wrap around type)
 28. Magazine (std. 8 rds. AR - 7 Explorer .22 cal) also 15 shots now available.
 29. Magazine catch - flat type
 30. Sear pivot screw (screwed on to trigger housing only)
 31. Trigger
 32. Spacers for trigger (steel washers)
 33. Trigger pin
 34. Safety pin
 35. Barrel pivot screw
 36. Spacers for front lug (brazed to lug)
 37. Connecting lug (front of receiver) brazed to receiver body
 38. Stock screws (4 pcs.)
 39. Magazine housing (brazed to trigger housing & trigger guard)
 40. Extractor spring
 41. Extractor
 42. Ejector
 43. Safety lever
 44. Plate for ejector pins
 45. Ejector retaining pins (riveted to plate)

FRONT FACE - BOLT

TOP VIEW - BOLT


BRAZED TO RECEIVER BODY


MAGAZINE HOUSING - CLEARANCE CUT FOR SEAR/TRIGGER BAR

MAGAZINE IN PLACE

MINI MACHINE PISTOL

© Copyright 1979 by Paladin Press

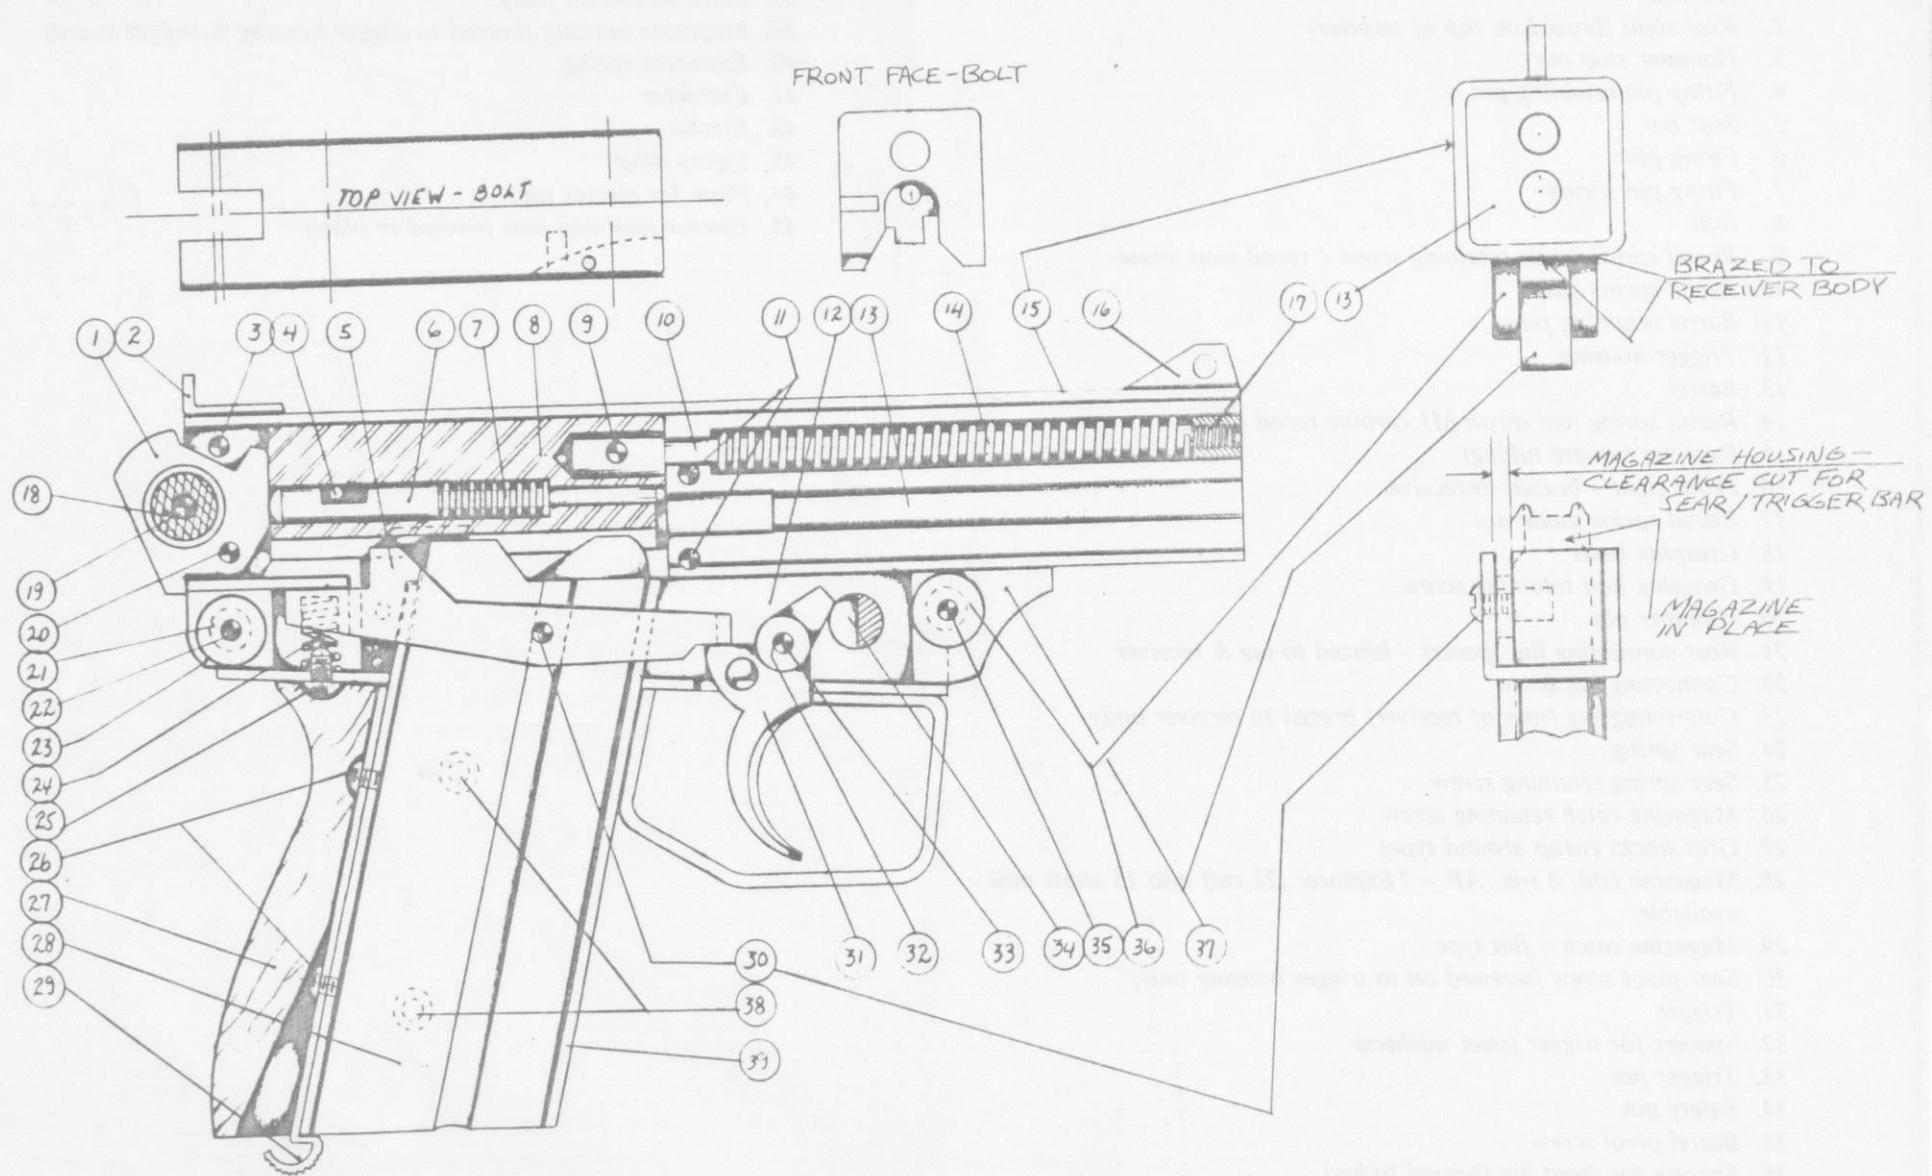

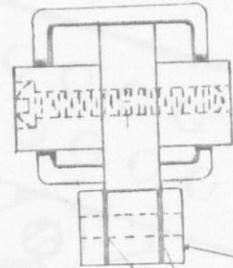

SPACERS BRAZED
TO RECEIVER REAR
CONNECTING LUG.

